




Open Front Shelf System - Installation Instructions

Please read all directions before commencing installation. If you have any queries about how to proceed, please give us a call on (0114) 275 6642.

Lay out enough material for two to five shelves at a time. A trolley or a clear work-surface might be useful for arranging the materials.

Materials Required:

- Aluminium Rails (one per shelf)
- Plastic dividers (usually 10-12 per metre shelf)
- Plastic label holders (optional)
- Adhesive for stick-on label holders (optional)
- Rubbing alcohol or similar cleaning solvent (not included).

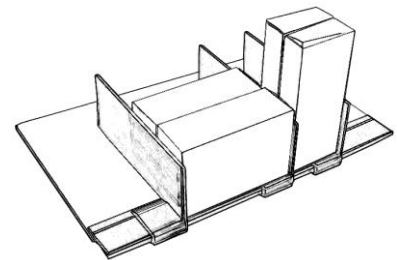


Step 1: Installing the plastic shelf profile.

[Do not peel off the adhesive covering until you get to step 4.]

[Handy Hint : Start with the shelves below eye level so you can see the shelf tops easily.]

1. Push back the stock items to expose 3-5cm of the front edge of the shelf. The aluminium shelf rail can be used to bush back all the items on the shelf at once.
2. Clean the exposed top edge of the shelf with rubbing alcohol or similar cleaning solvent. Allow to dry.
3. Practice the proper placement of the aluminium shelf rail on the shelf (steps 5 & 6). During practice do not remove the protective paper on the adhesive strip.
4. Peel off the protective paper from the adhesive strip on the bottom of the rail. Avoid touching the adhesive with your fingers or letting it come in contact with other surfaces after the protective paper is removed. Note: It is important to stick the aluminium shelf rail properly the first time as the adhesive will be weakened if it is pulled up and repositioned.
5. Hold the rail at a 45 degree angle against the front edge of the shelf, so that the adhesive is not yet in contact with the shelf top and the notch is tight against the top edge of the shelf. (The lip of the rail should extend 2cm in front of the shelf.) The entire length of the rail should be able to pivot on this notch on the shelf edge without sliding.
6. Rock the rail down against the shelf top and press in place by running your fingers evenly along the length of the rail.

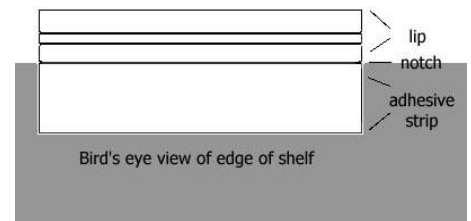

Step 2: Installing the dividers.

1. Position the dividers to the right of each group of stock items.
2. Snap the dividers into place on the top of the profile. (Dividers can be easily removed by raising the loose end of the divider 2cm with one hand and rotating the divider at the clip with other.)
3. To reposition groups of stock items, slide the divider along the profile, pushing the stock items into place.

Step 3: Installing the optional stick on label holders.

1. Peel off the protective paper from ONE side of the adhesive and press onto the front edge of the divider. Try not to touch the exposed adhesive or let it come in contact with other surfaces.
2. Peel the protective paper off the other side of the adhesive and press the plastic label holder into place.

NB: The adhesive takes 72 hours to develop maximum strength. Wait 3 days after installing label holders before putting ID labels in them.