




Drawer System - Installation Instructions

Please read all directions before commencing installation. If you have any queries about how to proceed, please give us a call on (0114) 275 6642.


Materials Required:

- Rail Holders
- Aluminium Rails
- Plastic Dividers
- Rubbing Alcohol or Similar Solvent (not included).

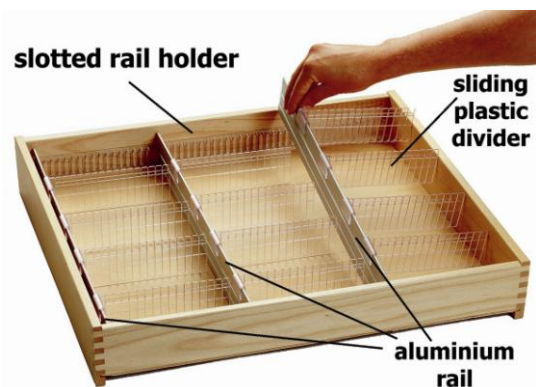


Installing rail holders:

1. Empty the drawer and clean the inside drawer walls with rubbing alcohol or other cleaning solvent. Leave to dry.
2. If there are any objects on the drawer walls, such as rivets, cut out a section of rail holder to allow for them.
3. Peel off the paper cover from the adhesive strip of the first rail holder. Avoid handling the exposed adhesive or allowing it to come into contact with anything.
4. Press the rail holder to the drawer wall. Keep the bottom edge of the rail holder on the bottom of the drawer.
5. Place the second rail holder on the opposite wall from the first. Be careful that the slots of the two rail holders line up with each other; otherwise the aluminium rails will not be square to the drawer.

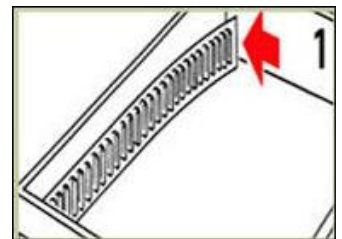

Installing the aluminium rails:


Place the aluminium rails in the rail holder using slots directly across from one another. NB: The aluminium rail is symmetrical, either end is up.

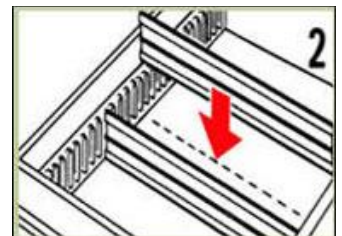

Installing the plastic dividers:

Snap the dividers onto the rails with a firm push. Slide them into position to make the desired storage compartments.

To further sub-divide the compartments, dividers can be hung from other dividers. Whenever possible, hang dividers so they click into place on the other divider. (The bottom of the hook on one divider will snap under the ridge on the other divider.) Dividers hung in the other direction will be tight, but may rotate.

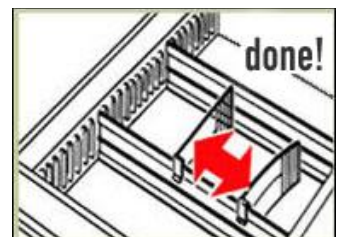

Shortening dividers:

The dividers can be shortened to many different lengths by placing the pre-scored divisions on the edge of a table top and pressing down. The pre-scored divisions snap off easily when removing two or more at once.

Want to remove than one division at a time? Need a divider length different than the available pre-scored divisions? Score the divider deeply with a heavy duty utility knife, put the scored mark on the edge of the table and snap the end off. To get a good break you must score the plastic deeply AND pull the scored side up. Allow for two to three practice dividers to get the technique right.

Removing plastic dividers:

The easiest way is to lift the loose end about 1-2cms with one hand and rotate the divider at the hook with the other hand. Lifting the loose end more than 2cms may break off the hook, as will jerking the divider straight up.